


Capping a Wall

SINGLE-PIECE SYSTEM INSTALLATION GUIDELINES


STRAIGHT WALL

Always start capping from the lowest elevation. Caps are trapezoidal and must be laid alternately short and long cap faces for a straight line. Cap units are supplied with a recess to the bottom of the unit to accommodate the locator, and should always be laid with the recess facing downwards.

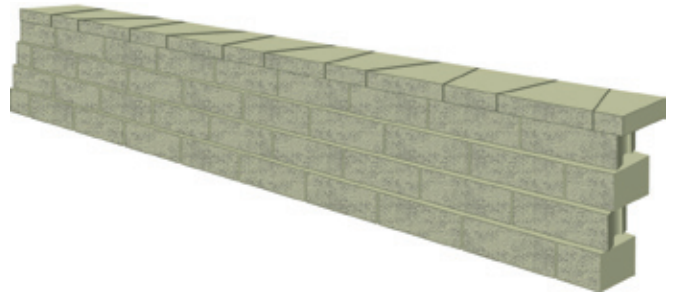

OUTSIDE CURVES

Lay out the cap units side by side and cut at least every other cap to produce a uniform look. Start with the long side of the cap facing out and adjust to the radius.

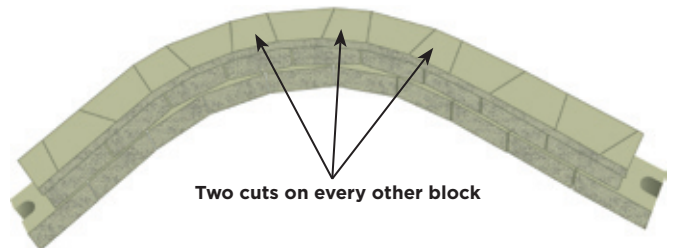

INSIDE CURVES

Lay cap units side by side with the short side facing out. In most circumstances, making two cuts on one cap and then not cutting the cap on either side produces the most pleasing look.

CORNERS

On a 90° corner wall, the corner caps need to be saw-cut to achieve a 45° mitered corner.

FINISHING

After layout is complete and caps are saw-cut to size, carefully glue the caps in place using a concrete adhesive.

© 2011 Anchor Wall Systems, Inc. Anchor™ retaining wall systems are manufactured under license from Anchor Wall Systems, Inc. (AWS). The "Anchor Build Something Beautiful" logo is a trademark of AWS. The wall system blocks are covered by the AWS Limited Warranty. For a complete copy, visit your local dealer or see anchorwall.com.

Anchor Wall Systems, Inc., 5959 Baker Road, Suite 390, Minnetonka, MN 55345.
A&B0925 73.3134.1 07/11 4023